

Image Page Edit

To set chapters,
select the image
then the new chapter
starts from the image.

To insert sheet, select ▽
then press [Insert/Move]
or [Blank Page].



Default (from the top)
Auto, A4/A4T, Plain, 64-74g/m2,
White, No Hole-Punch

[Chapters] is grayed out with
setting the combine or the repeat.

The inserted or blank sheet is not
printed on. The paper size of
[Blank Insert] is the same as the size
of the next sheet. If you put the blank
onto the ahead of the first sheet, the
size will be the first sheet.